


Touch&Steam

Technical Menu Manual


1. TECHNICAL MENU

This menu, which is normally hidden, gives access to the advanced settings of the panel.

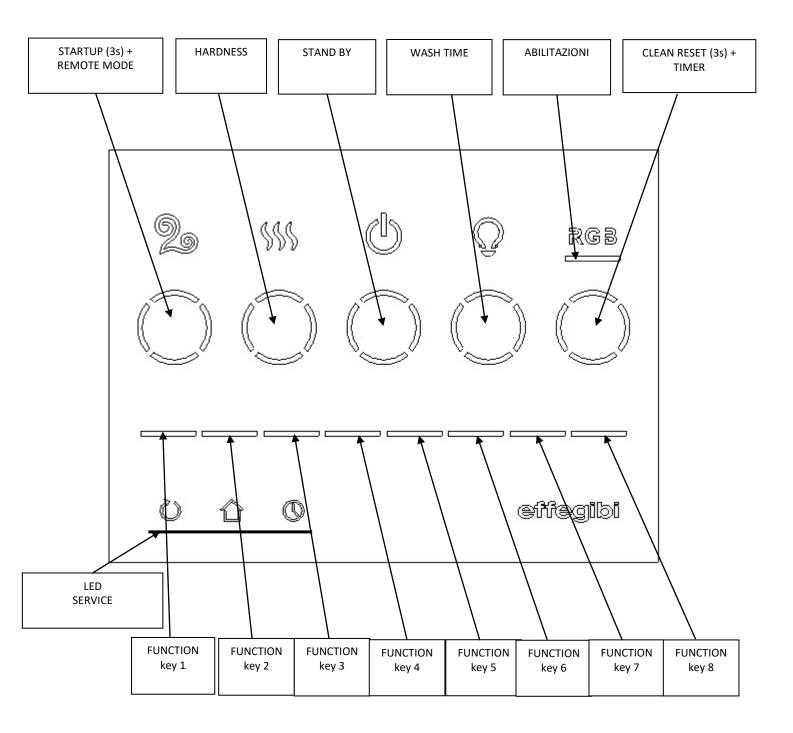

1.1 ACCESSING THE TECHNICAL MENU

When the panel is ON, press, in order, function key 3, function key 1 and then hold down the "STAND-BY" key until all the icons start flashing. This gives access to the technical menu.

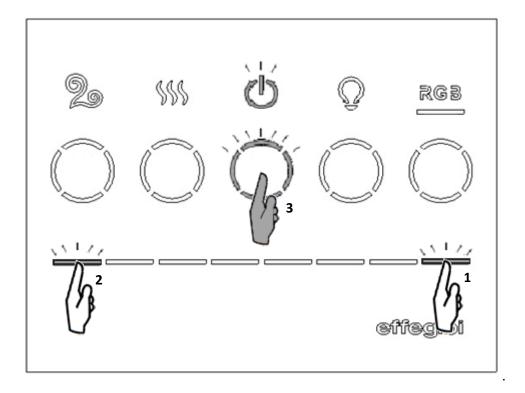


QUITTING THE TECHNICAL MENU


Press the "STAND- BY" key and the panel will go into "Panel ON" until you activate one of the functions.

1.2 HARDNESS


This allows you to set the type of water supply according to its hardness. Follow this procedure if you are familiar with the hardness of the water in French degrees. Access the technical menu (see paragraph 1.1) then press the "HARDNESS" key.

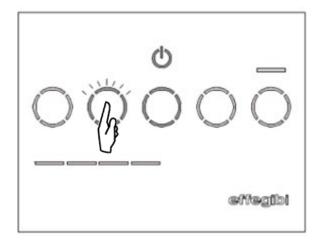


Set the desired value using function keys 1, 2, and 3

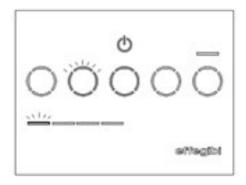


LOW for water hardness below 10°f – De-scaling indicator after 10937 hours

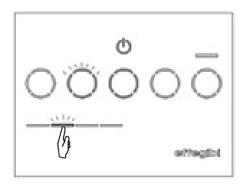

MEDIUM for water hardness between 10° and 20°f; – De-scaling indicator after 4375 hours

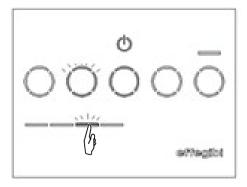

HIGH* for water hardness between 20° and 30°f – De-scaling indicator after 1750 hours

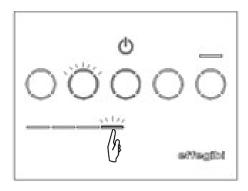


VERY HIGH for water harder than 30°f – De-scaling indicator after 700 hours


*N.B.: Factory setting

1.3 WASH TIME


This allows you to set the boiler cleaning time. To set the desired time period, access the technical menu (see paragraph 1.1.) then press the "WASH TIME" key.

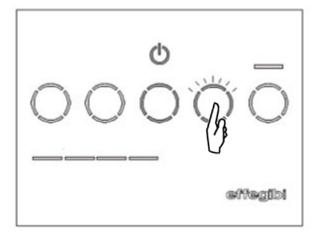

Set the desired value using function keys 1, 2, and 3

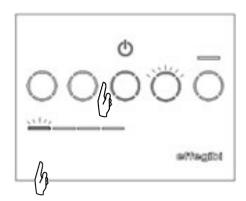


2 HOURS *

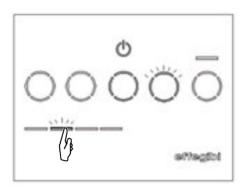


4 HOURS *

Rev 0.2

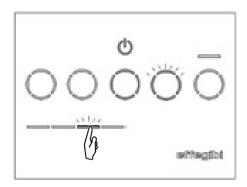

6 HOURS

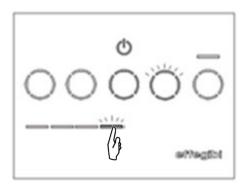


NEVER

*N.B.: Factory setting


1.4 CLEAN RESET

Clean Reset is used to reset the counter for the hours of operation and turn off the alarm indicator (icon with a wrench). To carry out Clean Reset, access the technical menu (see paragraph 1.1) then hold down the "RGB" key for more than three seconds.

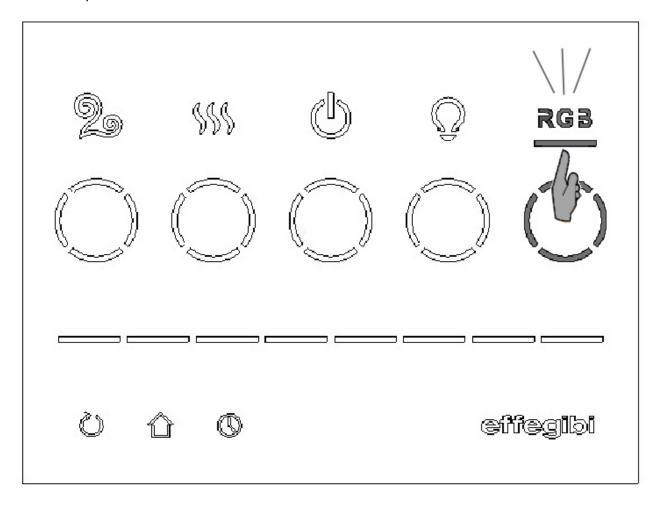


1.4 ENABLING SHOWROOM MODE


It is possible to enable/disable the SHOWROOM MODE by using the ENABLE key: Access the technical menu then press the "ENABLE" key.

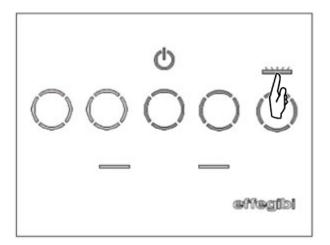

ENABLING SHOWROOM MODE

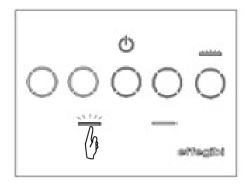

Function 3 key on, Function 6 key off: SHOWROOM MODE disabled *N.B.: Factory setting

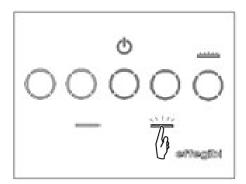

Function 3 key off, Function 6 key on: SHOWROOM MODE enabled

1.5 REMOTE FUNCTION (HOME AUTOMATION)

The REMOTE function allows you to start up the HAMMAM (steam generation) through a "CLEAN EXTERNAL CONTACT" (for example a switch).

Follow these 3 steps to activate this function:


- 1- ACCESS THE TECHNICAL MENU
- 2- CHOOSE THE OPERATING PROGRAMME
- 3- ENABLE/DISABLE THE REMOTE FUNCTION CHOSEN

1 - ACCESS THE TECHNICAL MENU

See paragraph 1.1

2 - CHOOSE THE OPERATING PROGRAMME

Press the "START-UP (3s) + REMOTE MODE" key.

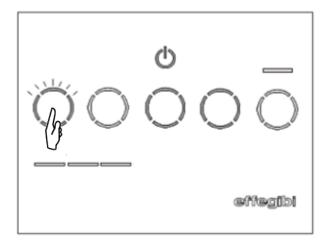


There are three kinds of operating programmes:

A) FUNCTION 1: "DOMESTIC"

This allows you to switch the "clean" external contact on/off and:


- use all the functions on the control panel

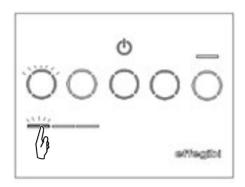

B) FUNCTION 2: "PROFESSIONAL WITH COLOUR THERAPY"

This allows you to:


 Use all the functions on the control panel EXCEPT turning on the steam (as this is controlled by the "clean" external contact)

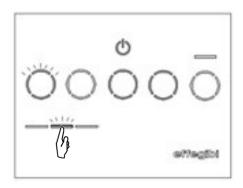

C) FUNCTION 2: "PROFESSIONAL WITH PANEL DISABLED"


This allows you to:

- Turn the panel on / off only
- Turn the white light on / off only
- Turn the steam off and not on (as this is controlled by the "clean" external contact). To switch the Hammam off, press the "STEAM" key for approximately 5 seconds

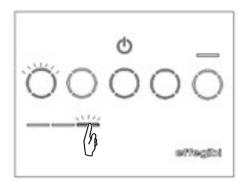


The factory sets the programme to C. Choose the operating programme you wish to use from the options A - B - C.

3 - ENABLE/DISABLE THE REMOTE FUNCTION CHOSEN

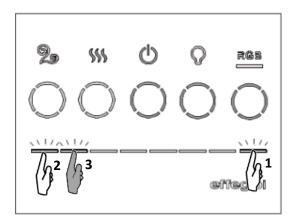

Press, in order, function key 3, function key 1 and then hold down function key 2 until the icon "O" comes on (do not hesitate between pressing the keys).

To disable the remote mode, press the same keys in the same order and the icon "U" will switch off.

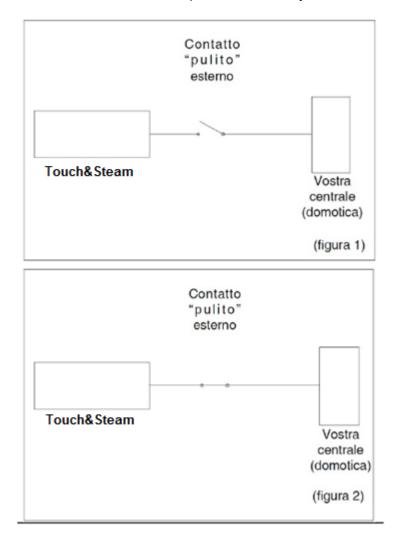


Once the remote function has been enabled, as soon as the remote external contact goes from open to closed, the Hammam will start up.

If the Hammam/Turkish bath has been switched off from the panel with the remote external contact still closed, the remote contact must be opened and then closed again.

SUMMARY OF OPERATING PROGRAMMES

			SSS		RG3	
	STAND BY	наммам	WARM	LIGHT	COLOUR THERAPY	TEMPERATURE
Domestic	ტ /ტ	_	ტ/ტ	<u>ወ</u> /ወ	ტ/ტ	4
Professional with colour therapy	(b) / (b) ₃	1/2	×	७/७	७/७	4
Professional	७/ ७ ₃	1/2	×	ტ/ტ	×	×

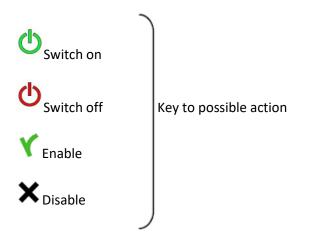

PLEASE NOTE: The functions in the table can only be enabled after the REMOTE FUNCTION HAS BEEN ENABLED and when the "clean" external contact is closed (Fig.2)

- 1 To switch off the STEAM function, hold down the HAMMAM/TURKISH BATH key (approx. 5 seconds);
- If the cleaning cycle takes place while the Hammam/Turkish bath is working (the slider Temperature set will flash), hold down the HAMMAM/TURKISH BATH key to interrupt the cleaning programme. Press the HAMMAM/TURKISH BATH key again for approximately 5 seconds to interrupt the Hammam/Turkish bath;
- To switch off the panel (and, as a result, the Hammam/Turkish bath if it is in operation), hold down the STAND-BY key (approx. 5 seconds).



PERFECT WELLNESS

Via Gallo 769 47522 Cesena (FC) Tel. +39 0547 372881 – fax +39 0547 372924 www.effegibi.it

e-mail: info@effegibi.it